

ITEM	CODE	DESCRIPTION	Q.TY
1	DM330S-001	Coperchio accumulatore <i>Accumulator cap</i>	1
2	DM330S-002	Accumulatore <i>Accumulator</i>	1
3	DM330S-003	Boccola accumulatore <i>Accumulator bushing</i>	1
4	DM330S-004	Pistone <i>Piston</i>	1
5	DM330S-005	Corpo martello <i>Hammer body</i>	1
6	DM330S-006	Boccola fermautensile <i>Lower bushing</i>	1
7	DM330S-007	Cilindro <i>Cylinder</i>	1
8	DM330S-008	Tampone Superiore <i>Top stopper</i>	1
9	DM330S-009	Tampone Inferiore <i>Lower stopper</i>	1
10	DM330S-010	Anello di guida <i>Guide ring</i>	1
11	DM330S-011	Spina cilindrica fermautensile <i>Tool retainer pin</i>	1
12	DM330S-012	Carcassa Silenziata <i>Silenced case</i>	1
13	DM330S-013	Piastra di guida <i>Guide plate</i>	1
14	DM330S-014	Piastra superiore <i>Upper plate</i>	1
15	DM330S-027	Sella <i>Saddle</i>	1
16	DM330S-016	Perno sella <i>Saddle pin</i>	2
17	DM330S-015	Coperchio in lexan <i>Lexan cover</i>	1
18	DM330S-017	Targhetta CE <i>CE plate</i>	1
19	DM330S-018	Corpo Distributore <i>Distributor box</i>	1
20	DM330S-019	Ghiera distributore <i>Distributor ring nut</i>	1
21	DM330S-020	Tappo Superiore <i>Upper plug</i>	1
22	DM330S-021	Tappo inferiore <i>Lower plug</i>	1
23	DM330S-022	Pistoncino distributore <i>Distributor piston</i>	1
24	DM330S-023	Adesivo DEMOTER <i>Label DEMOTER</i>	1
27	DM330S-026	Nottolino ferma spina <i>Tool retainer pin</i>	1
28	DM330S-028	Adesivo modello S 330 <i>Model label S 330</i>	1
30	DM330S-029	Tappo esagonale valvola azoto <i>N2 valve plug</i>	1
N01	DM330S-033	Brugola tappo superiore <i>Upper plug allen screw</i>	4
N02	DM330S-034	O.R. tappo superiore distributore <i>O-Ring upper plug distributor</i>	1

ITEM	CODE	DESCRIPTION	Q.TY
N03	DM330S-035	B.K. tappo superiore distributore <i>B.K. Upper plug distributor</i>	2
N04	DM330S-036	O.R. tappo superiore distributore <i>O-Ring Upper plug distributor</i>	1
N05	DM330S-037	Brugola corpo distributore <i>Distributor body allen screw</i>	6
N06	DM330S-038	B.K. tappo inferiore distributore <i>B.K. Distributor lower plug</i>	1
N07	DM330S-039	O.R. tappo inferiore distributore <i>O-Ring distributor lower plug</i>	1
N08	DM330S-040	O.R. travaso facciata inferiore <i>O-Ring lower face distributor</i>	1
N09	DM330S-041	O.R. travaso distributore <i>O-Ring racking distributor</i>	2
N10	DM330S-042	O.R. travaso centrale distributore <i>O-Ring central racking distributor</i>	1
N11	DM330S-043	Rondella distributore <i>Washer distributor</i>	3
N12	DM330S-044	Tappo distributore <i>Distributor plug</i>	3
N13	DM330S-045	Tappo raccordo 90° IN-OUT olio <i>IN-OUT oil nipple 90° plug</i>	2
N14	DM330S-046	Raccordo 90° IN-OUT olio <i>IN-OUT oil nipple 90°</i>	2
N15	DM330S-047	Spina centraggio distributore <i>Distributor pin</i>	2
N16	DM330S-048	Brugola coperchio Accumulatore <i>Allen screw Accumulator plug</i>	13
N17	DM330S-049	Brugola raccordo 90° IN-OUT olio <i>Allen screw IN-OUT oil nipple 90°</i>	6
N18	DM330S-050	O.R. raccordo 90° <i>Nipple 90° O-Ring</i>	2
N19	DM330S-051	Nipple raccordo IN-OUT olio <i>Nipple IN-OUT oil</i>	2
N20	DM330S-052	Rondella raccordo 90° <i>Nipple 90° washer</i>	2
N21	DM330S-053	Brugola accumulatore <i>Allen screw accumulator</i>	20
N22	DM330S-054	Brugola piastra guida <i>Allen screw guide plate</i>	4
N23	DM330S-055	Clip arresto perni sella <i>Clips for locking pin of saddle</i>	4
N24	DM330S-056	Valvola carica azoto <i>N2 nitrogen valve</i>	1
N25	DM330S-057	O.R. coperchio accumulatore <i>O-Ring accumulator cover</i>	1
N26	DM330S-058	O.R. accumulatore <i>O-Ring accumulator</i>	1
N27	DM330S-059	Spina accumulatore <i>Accumulator pin</i>	4
N28	DM330S-060	Guarnizione ID <i>ID seal</i>	3
N29	DM330S-061	O.R. cilindro e boccola <i>O-Ring cylinder & bushing</i>	5
N30	DM330S-062	B.K. Cilindro e boccola <i>B.K. Seal cylinder & bushing</i>	7

ITEM	CODE	DESCRIPTION	Q.TY
N31	DM330S-063	Guarnizione OMEGAT <i>Omegat seal</i>	1
N32	DM330S-064	Raschiatore cilindro <i>Cylinder scrape</i>	1
N33	DM330S-065	Raschiatore punta <i>Tool scraper</i>	1
N34	DM330S-066	Spina elastica nottolino <i>Nut lock elastic pin</i>	1
N35	DM330S-067	Grano foro boccola <i>Bushing grab screw</i>	1
N36	DM330S-068	Molla nottolino <i>Nut lock spring</i>	1
N37	DM330S-069	Ingrassatore <i>Grease nipple</i>	1
N38	DM330S-070	Dado autobloccante sella <i>Saddle selflock nut</i>	12
N39	DM330S-071	Bullone sella <i>Saddle bolt</i>	12
N40	DM330S-072	Vite parker coperchio <i>Cover parker screw</i>	6
N41	DM330S-073	Rivetto targhetta CE <i>CE plate rivet</i>	4
N42	DM330S-074	Brugola tappo inferiore distributore <i>Allew screw distributor lower plug</i>	4
N43	DM330S-077	O.R. tappo esagonale valvola azoto <i>O-Ring N2 nitrogen valve plug</i>	1
N44	DM330-078	Guarnizione OMEGAT 111 <i>Omegat Seal 111</i>	1
	DM330S-075	"A" KIT GUARNIZIONI MARTELLO S 230 <i>"A" Seal kit for S 230 hammer</i>	1
	DM330S-076	"B" KIT TAPPO VALVOLA AZOTO <i>"B" N2 Nitrogen valve kit</i>	1
N45		Etichetta PESO <i>Weight sticker</i>	1
N46		Etichetta RUMORE <i>Noise sticker</i>	1
N47	DM170S-079	Adesivo attenzione <i>Label Use-Caution</i>	1
N48	DM170S-078	Vite Tappo Accumulatore <i>Screw Accumulator Plug</i>	1
N49	DM170S-079	Rondella Tappo Accumulatore <i>Washer Accumulator Plug</i>	1
N50	DM170S-080	Chiavetta di guida <i>Guide</i>	1